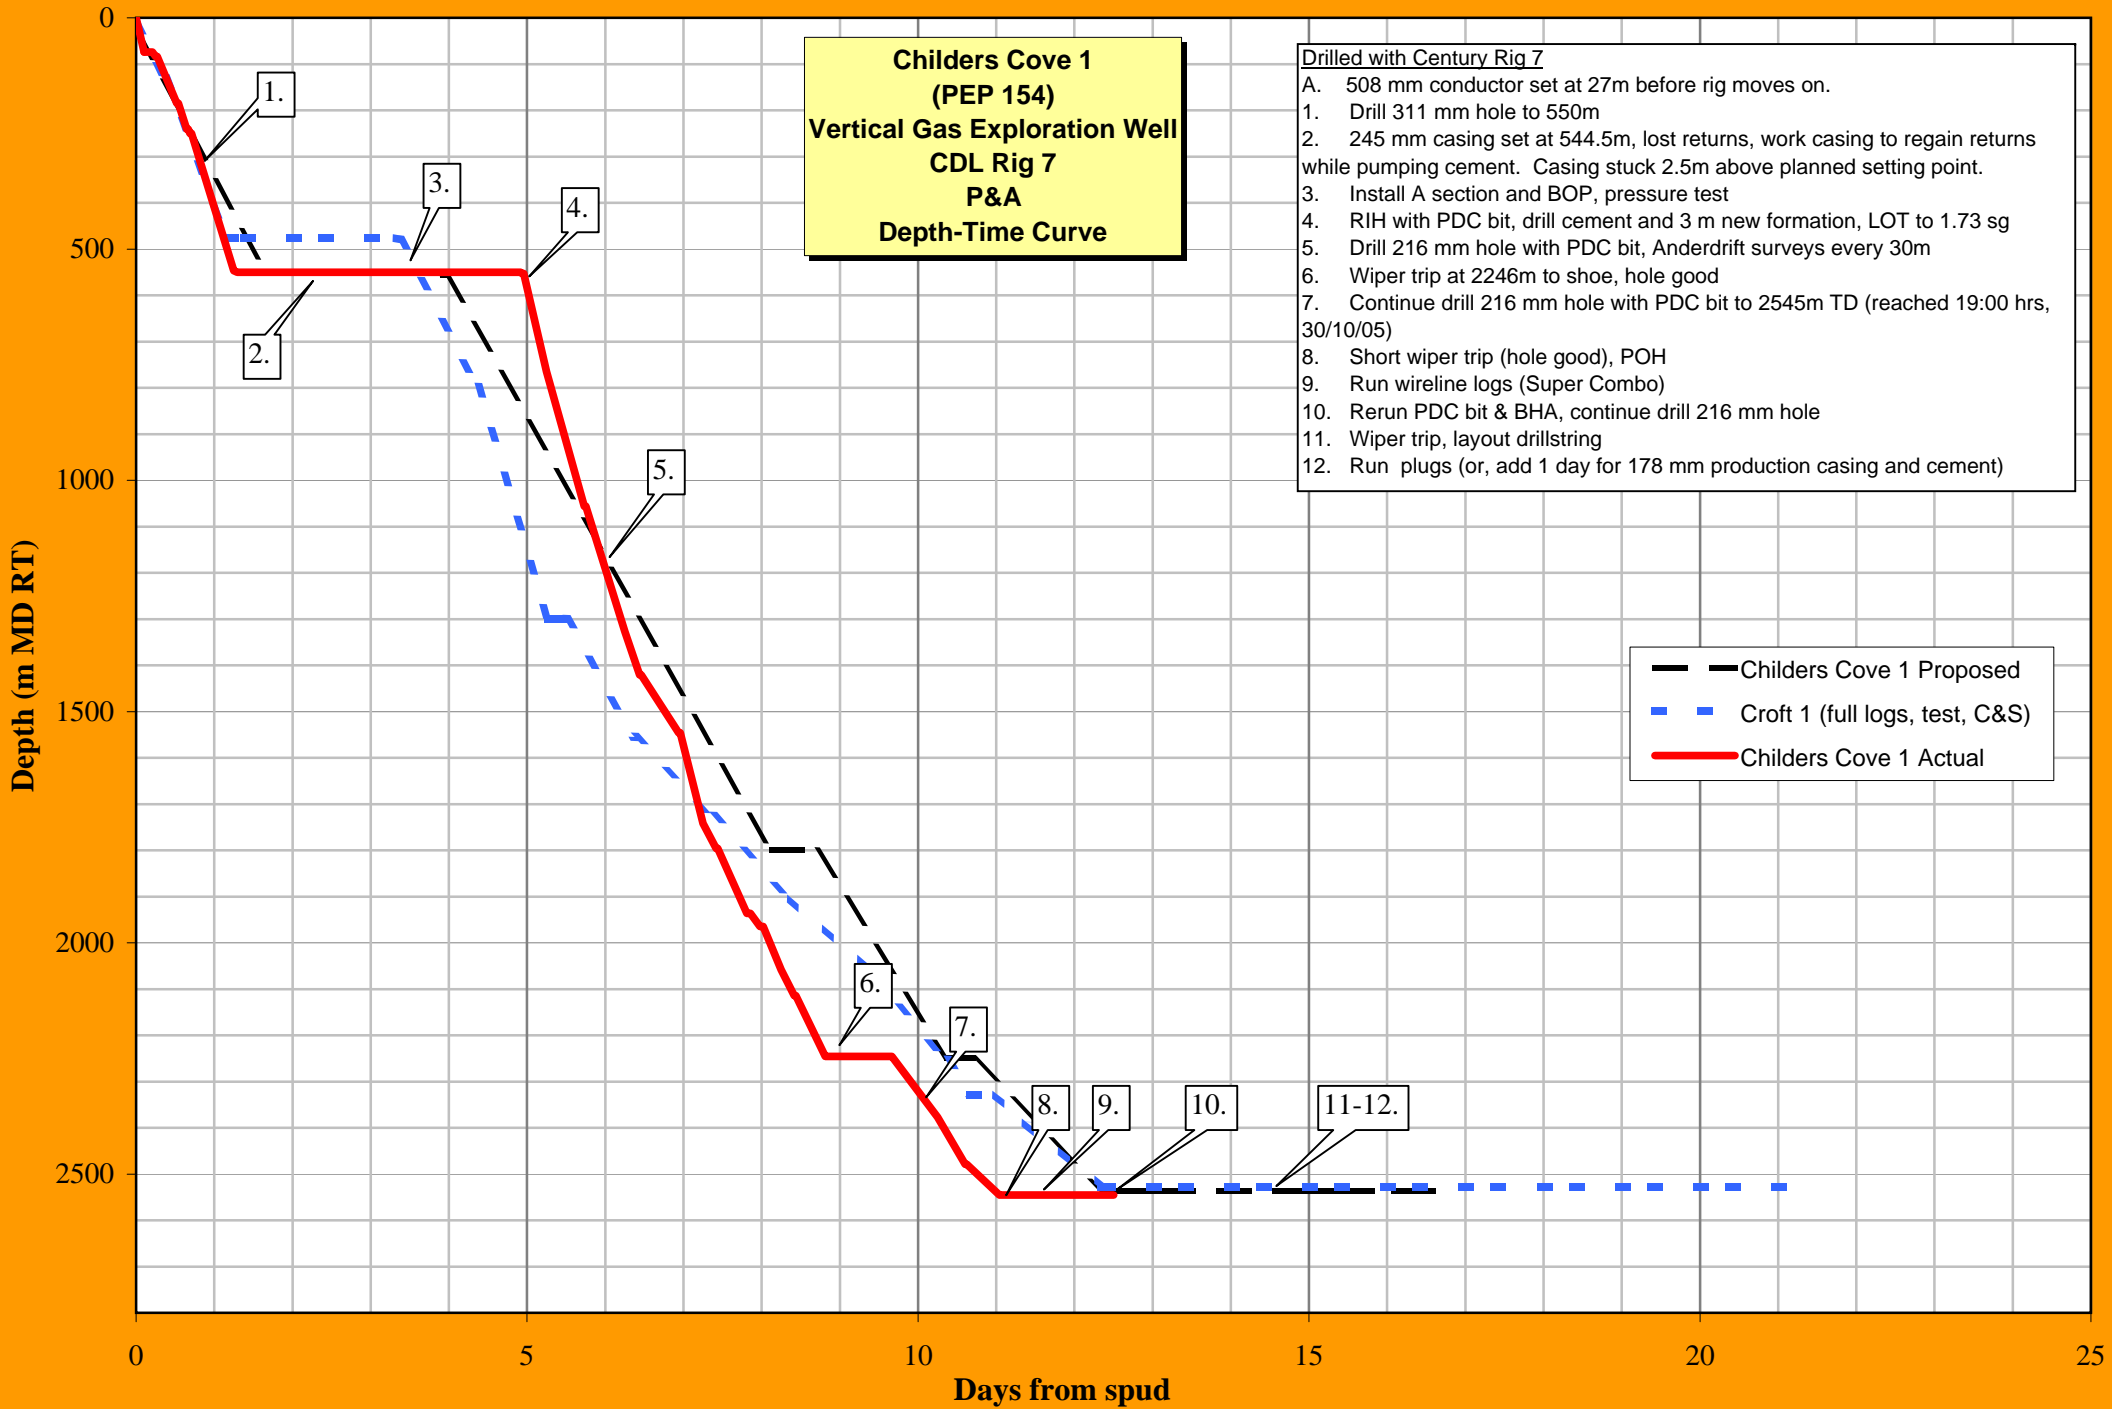


**Childers Cove 1  
(PEP 154)  
Vertical Gas Exploration Well  
CDL Rig 7  
P&A  
Depth-Time Curve**

**Drilled with Century Rig 7**

- A. 508 mm conductor set at 27m before rig moves on.
- 1. Drill 311 mm hole to 550m
- 2. 245 mm casing set at 544.5m, lost returns, work casing to regain returns while pumping cement. Casing stuck 2.5m above planned setting point.
- 3. Install A section and BOP, pressure test
- 4. RIH with PDC bit, drill cement and 3 m new formation, LOT to 1.73 sg
- 5. Drill 216 mm hole with PDC bit, Anderdrift surveys every 30m
- 6. Wiper trip at 2246m to shoe, hole good
- 7. Continue drill 216 mm hole with PDC bit to 2545m TD (reached 19:00 hrs, 30/10/05)
- 8. Short wiper trip (hole good), POH
- 9. Run wireline logs (Super Combo)
- 10. Rerun PDC bit & BHA, continue drill 216 mm hole
- 11. Wiper trip, layout drillstring
- 12. Run plugs (or, add 1 day for 178 mm production casing and cement)



**FIGURE 4**